



Philips Domestic Appliances and Personal Care

Service Manual

PRODUCT INFORMATION

Features :

- Contour Tracking System; comb adapts to the contours of the face.
- Precision Zoom Lock; for precise adjustability of the comb in 9 lengths between 1.5 mm and 18 mm.
- Beard length indication window.
- Charging indication (LED on Adapter).
- Maintenance free cutting element: no oiling required.
- Revolutionary wave shaped, self sharpening blades channel and cut hair for a precise and even trim.

Safety:

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Power system : Rechargeable
- Batteries : 1x AA NiCd
- Charging period : NiCd batteries : 10 hours
- Capacity : NiCd batteries : Up to 35 minutes

DISASSEMBLY- AND RE-ASSEMBLY ADVISE

- No specific issues


REPAIR INSTRUCTIONS

Notes

- * In order to guarantee the longest possible working life of the battery :
 - do not charge for more than 24 hours
 - do not keep the charging unit permanently plugged in
 - discharge the battery completely once a year by letting the motor run until it stops
- * If the battery is empty and the consumer wants to trim his beard, the trimmer has to be charged for at least 1.5 hours to have enough power for one trim
- * The appliance should be charged again, when not used for a long period

OPTIONAL (accessories)

- No specific issues

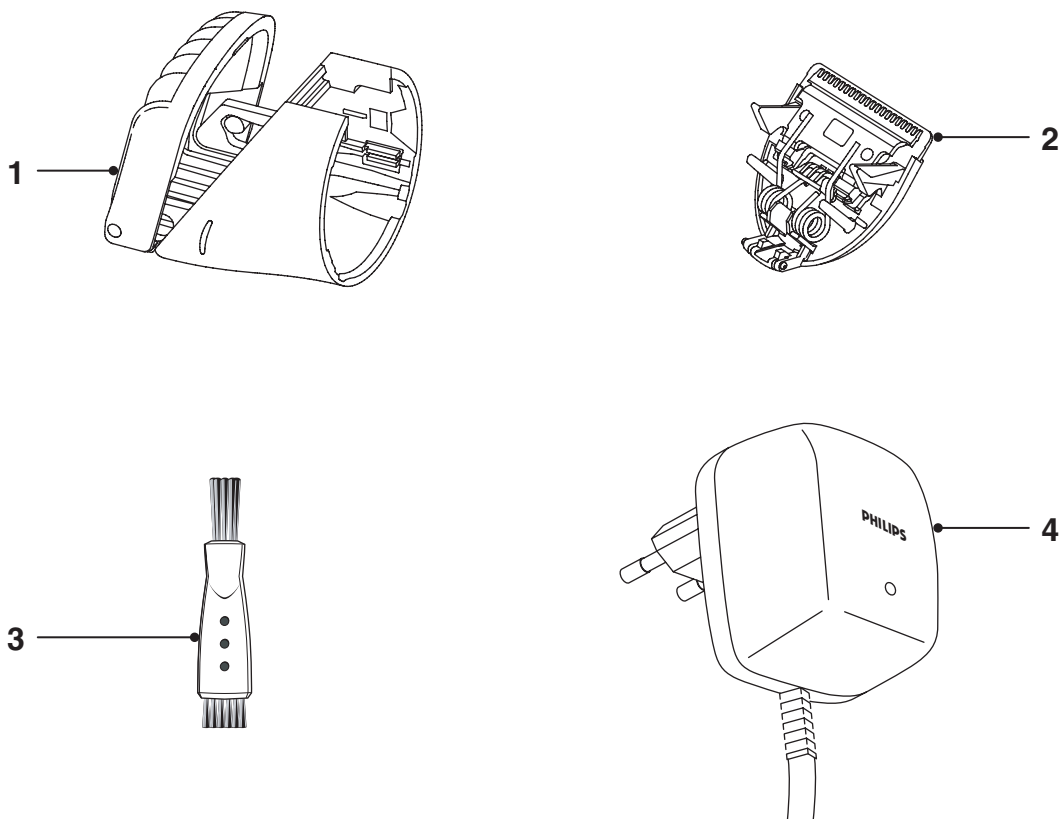

Pos	Service code	Description
1	4203 035 52000	Comb
2	4203 035 76420	Cutter Assy
3	4822 479 30183	Cleaning Brush
4	4203 035 76520	Adapter EU
	4203 035 76550	Adapter UK
	4203 035 76530	Adapter CDN
	4203 035 76540	Adapter USA